



Belt Guard Installation

HIRED-HAND®

Belt Guard Kit	
Part Number	Description
6403-0149	Guard PVC Belt
1004-0050	Screw #14 Tek z
1003-1461	Washer Flat 1/4" zinc


CAUTION!
Turn Off all Power to the fan before installing the Belt Guard.

Tools Required:	3/8" Nut Driver
Drill	1/8" drill bit

IMPORTANT!
Locate packing slip and make sure that all listed parts are enclosed. If not, call your Hired-Hand distributor immediately. Please read and understand all instructions in this manual before assembling fan.

Assembly Instructions

1. Turn off all power to the fan.

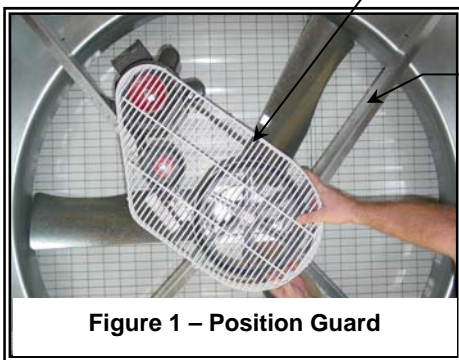

Belt Guard

Fan Brace

Figure 1 – Position Guard

2. Place the Belt Guard over the Pulley Assembly and align the four Guard mounting holes with the four fan braces. See Figure 1.
3. Mark the location for the four mounting screws on the fan braces. See Figure 2.

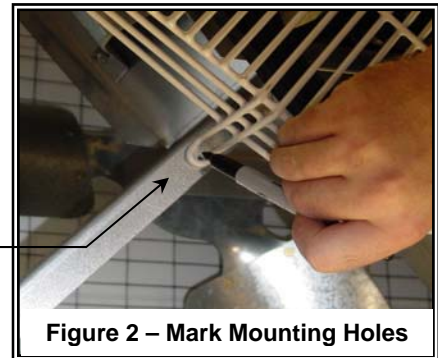


Figure 2 – Mark Mounting Holes



Figure 3 – Drill Four Holes

Add two washers between fan brace and belt guard if necessary



Figure 4 – Install Tek Screws

4. Remove the Belt Guard and drill four 1/8" holes for the mounting screws. See Figure 3.
5. Replace the Belt Guard and install with the four tek screws and washers provided. See Figure 4. **NOTE: If the motor shaft touches the Belt Guard, add two washers between the Belt Guard mounting lugs and the fan braces.**

Motor Shaft

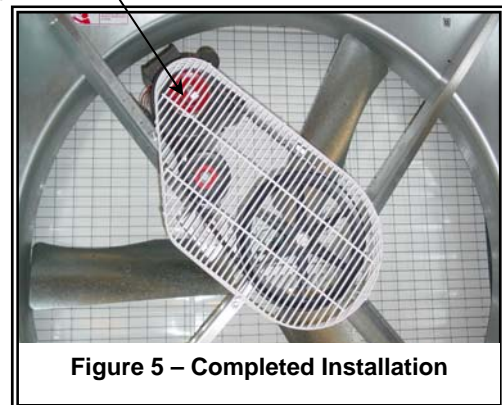


Figure 5 – Completed Installation

6. Apply power and verify proper fan operation. **NOTE: Ensure that no moving parts make contact with the Belt Guard.**
7. Installation Complete. See Figure 5